
WHO PQS Temperature Zone Rating

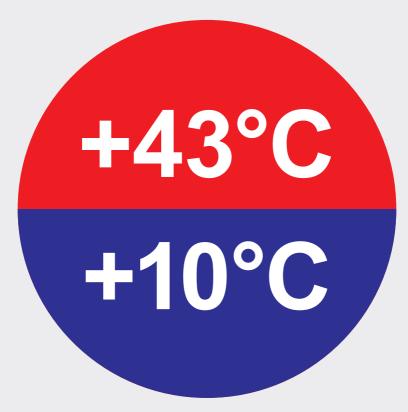

CFD-50 Ice-lined Refrigerator Operation and Maintenance



CAUTION: Read and follow instructions carefully to ensure proper refrigerator performance and safe vaccine storage



TECHNICAL SUPPORT CONTACT:

NAME:		
PHONE:		

OPERATION

Commissioning

- Install refrigerator in a dry and well ventilated area
- Place refrigerator on a level surface and at least 10cm from the wall
- Fill refrigerator with clean drinking water before use DO NOT OVERFILL

Daily Routine

- Keep the door closed and latched open only when required
- Check the storage temperature to ensure it is within +2°C to +8°C

FILL INSTRUCTIONS

Vaccine Storage

- ONLY use refrigerator when thermometer indicates +2°C to +8°C
- Store payload anywhere inside refrigerator's compartment; all internal surfaces of refrigerator are within +2°C to +8°C during normal operation, but do ensure sufficient air gaps between payload for cold air circulation.

MAINTENANCE

At the beginning of each month:

- Wipe down condensation inside the vaccine chamber
- Remove any surrounding objects around the refrigerator that might obstruct airflow
- Clean external condenser
- Clean front and back ventilation covers
- Clean and check door gaskets for cracks; replace if necessary

Every year (Technician):

• Check water level

